



EZ LOCK


User Guide for EZ_NUM_2001 Lock



Attention: Default master code is "123456" and User Code "123". Change codes once deadbolt is installed for added security. Codes can be any combination of 2 to 8 digits long.

Security Shutdown: after 4 wrong codes are entered, the LED will flash red and produce alarm sounds. The lock will remain blocked for 30 seconds.

"C" button used to clear entries

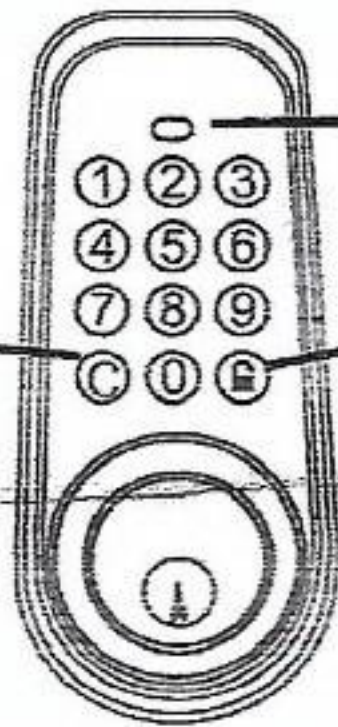

LED Indicator

Padlock button used to activate lock and also during programming

LED - Message Definition

Low Battery: Red light and beeps during 5 seconds.
Valid Programming: Green light and 1 long beep
Invalid Programming: Red light and 1 long beep
Lock Error: Red light and 3 long beeps

Change Master Code

Current Master Code - - 4 - - New Master Code - - Repeat New Master Code -

Unlock

Enter a valid code and press - Lock LED will light green and beep

Lock

Press - Lock LED lights red and sounds two beeps

Add User Code (up to 10 different user codes)

Master Code - - 1 - - New User Code - - Repeat New User Code -

One Use Code (code is deleted from memory after it is used):

Master Code - - 7 - - One Use Code - - Repeat One Use Code -

Erase User Code

Master Code - - 2 - - User Code to Erase - - Repeat User Code to Erase -

Erase All User Codes

Master Code - - 3 - - Repeat Master Code -

Note: This procedure will erase all user codes, but not the master code.

Auto Lock

Activate Auto Lock: Master Code - - 8 - Auto relock is set for 15 seconds

Cancel Auto Lock: Master Code - - 9 -

Set Autolock timer: Master Code - - 8 - Enter 05-99 seconds (two digits) -

Silent Mode

Master Code - - 0 -

Note: Repeat procedure to activate sound.

Reset Master Code to Factory Default

Remove and re - install one battery. The lock will respond with a long beep followed by a short beep.